

# Inverter Operation Guide

INVT iMarsXD6KTL



# Contents

01

**Scenario**


02

**Connection**

03

**Configuration**


## Simple home storage scenario

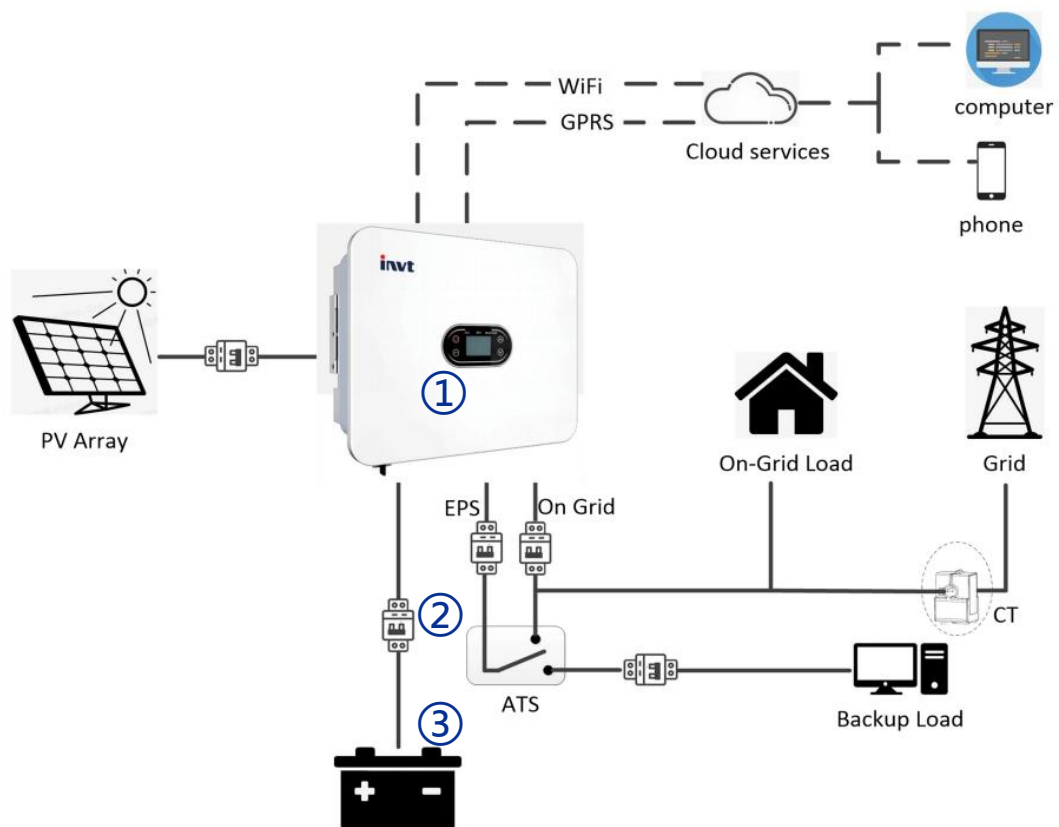

### Key elements


- ① **Inverter** : INVT iMarsXD6KTL
- ② **Interconnection cable**: Customized communication cable
- ③ **Battery**: The Li-ion Battery Pack composed of 16 strings of cells

## PCS Control Panel

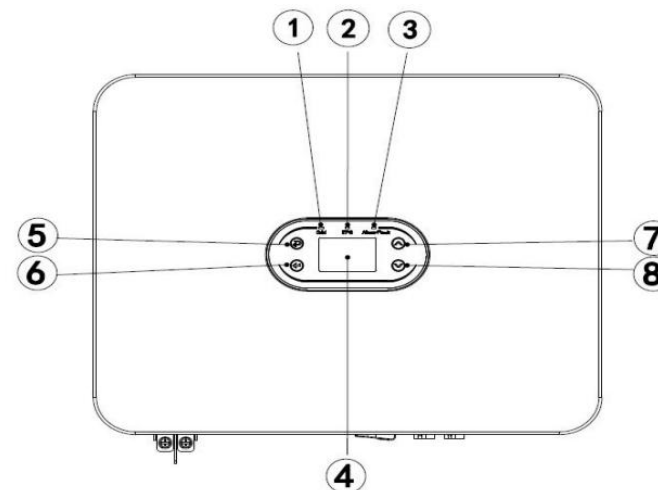


Object	Description
1	Green light
2	Yellow light
3	Red light
4	LCD screen
5	Return key
6	Enter key
7	Up key
8	Down key

## PCS Interfaces

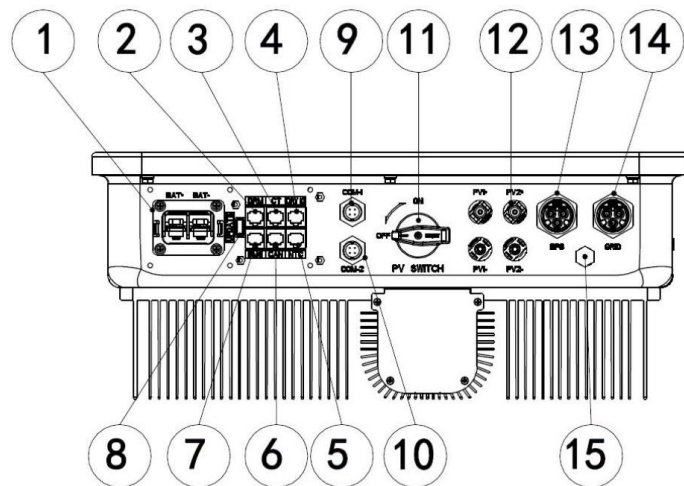


No:	Paraphrase	No:	Paraphrase
1	Battery terminal blocks	2	RJ45 interface for DRMs (Australia)
3	RJ45 interface of CT	4	Dry contact&(parallel communication)
5	CAN2(parallel communication)	6	CAN1(parallel communication)
7	BMS communication	8	USB port (software upgrade)
9	COM-1(RS485/WIFI/GPRScommunication)	10	USB port (software upgrade)
11	PV input DC switch	12	PV input
13	EPS output terminal	14	Grid terminal blocks
15	Breathable valve		

## Connection Between PCS and BMS

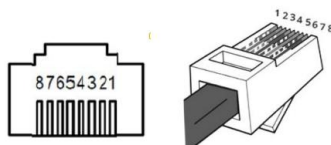

Inverter pin	Defined declaration
4	<b>CAN-L</b>
5	<b>CAN-H</b>

PCS Side

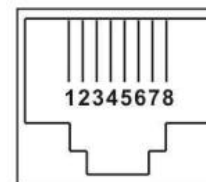

PIN1	<b>RS485-B</b>
PIN2	<b>RS485-A</b>
PIN3	GND
PIN4	<b>CAN-H</b>
PIN5	<b>CAN-L</b>
PIN6	GND
PIN7	RS485-A
PIN8	RS485-B


BMS Side

# Matching Setting of Inverter and BMS-1




①

- 1. Check system connection conforms
- 2. Turn on the AC power switch

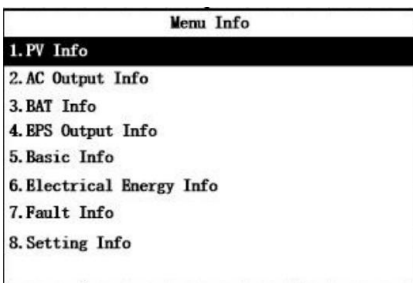


②

Press "←| " --> settings interface

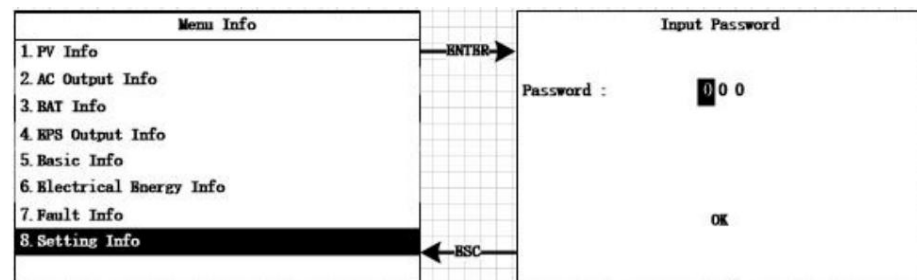


③

"8.Setting Info"-->"Password" \*\*\*

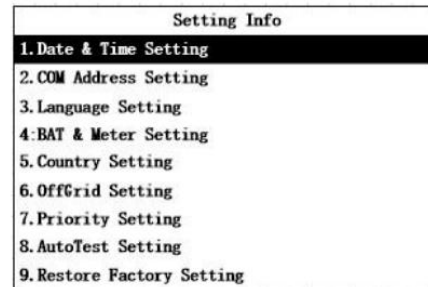


按“确认”键

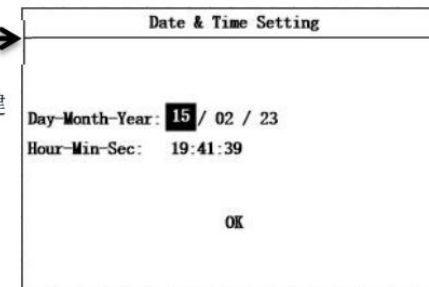


④

Set the time

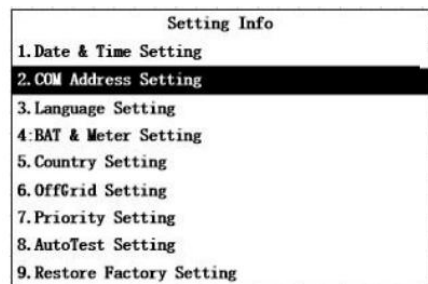


按“确认”键

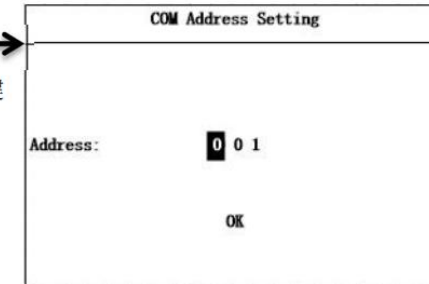


⑤

Set the mailing address

# Matching Setting of Inverter and BMS-2


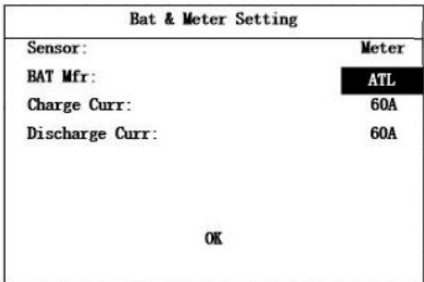


按“确认”键

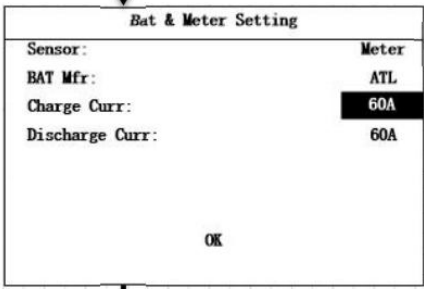



⑥

"Sensor" -->CT communication protocol -->PYLON

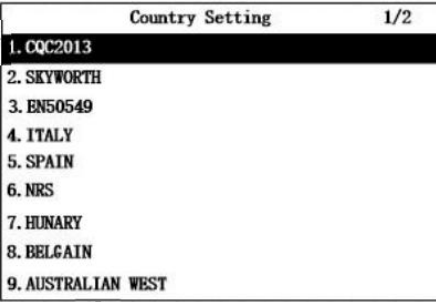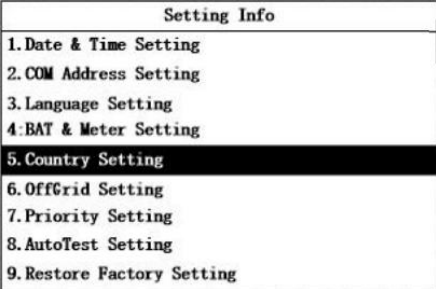

⑦

"5.Country Setting" -->set the grid format to TAIWAN

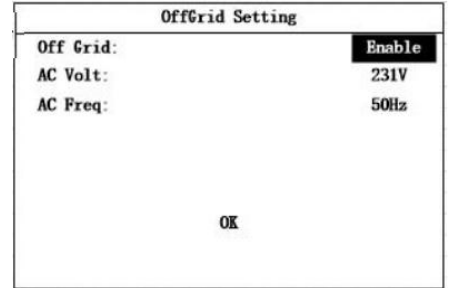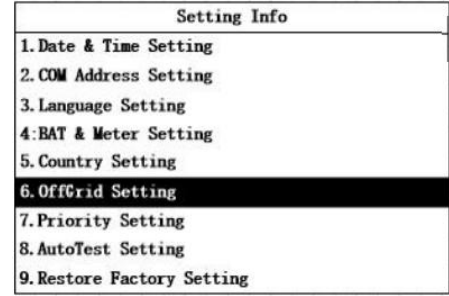

⑧


"6.OffGrid setting"-->"Off Grid"--"Enable" Set the AC parameters

# Matching Setting of Inverter and BMS-3



9

"7.Priority Setting"--> "BAT first Setting" (battery priority mode)

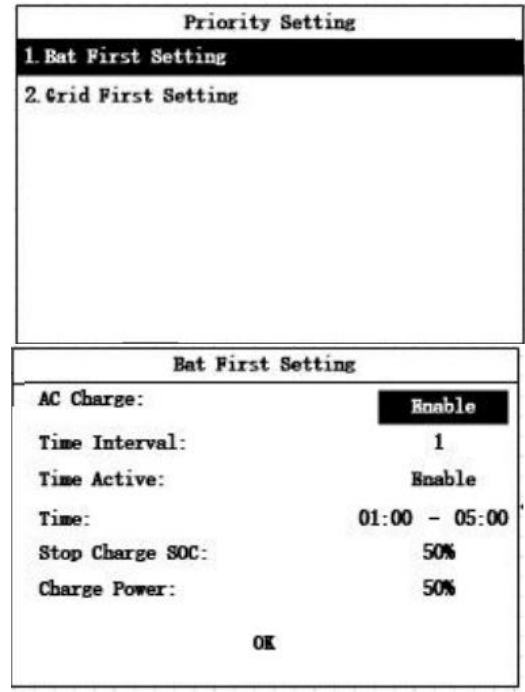

10

Turn on the AC switch to set the charging period from 01:00-23:59 to charge for 24 hours